## Ceiling lamp 6 rotating arms



120V / 60 Hz 6x60W incandescent

Suitable for indoor use only. Maximum ambient temperature 25°C.

Caution: The luminaire shall be always connected to the main ground conductor.

Installation has to be carried out by a qualified electrician. This lamp must be permanently wired into the electric system. Always shut off power to the circuit before starting installation work.

The main conductors coming from the ceiling into the lamp base must have a minimal length of 15cm/6inch between the ceiling and the electrical connection to the lamp.

Smooth wire: connect to the line Ribbed wire: connect to the neutral

Yellow/Green wire: connect to the ground

Different materials require different types of fittings. Always choose screws and plugs that are specially suited to the material.

If the external flexible cable or cord of this luminaire is damaged, it must be exclusively replaced by the manufacturer to avoid any hazard.

Shut off power to the circuit before changing the bulb.

## Instructions

## Ceiling lamp 6 rotating arms

Unpack without using any cutter or scissor because of possible scratches.

- 1. Unpack the upper part of the base.
  Unpack gently the 2 long arms but not their reflectors.
- 2. Insert the 2 long arms into the long tubes of the base.

  Then screw the 2 brass nuts into the base. Do not tighten strongly to allow easy rotation.
- 3. Connect electrical wires (smooth wires together and ribbed wires together).
- 4. Locate the positionning of the round base to the ceiling. Different materials require different types of fittings. Always choose screws and plugs that are specially suited to the material.
- 5. Fix the hook to the ceiling.
- 6. At this stage, at least 2 operators are necessary. Before starting, turn off power at main circuit panel. One operator maintains the lamp, second operator hungs the lamp to the hook with the black cable then connects electrical wires.
- 7. Fix the lamp to the ceiling.
- 8. Remove completely the packaging.
- 9. Screw the 6 hexagonal brass screws. Before moving the arms, the screws must not be tightened otherwise painting could be damaged.





