


Sconce 5 rotating straight arms

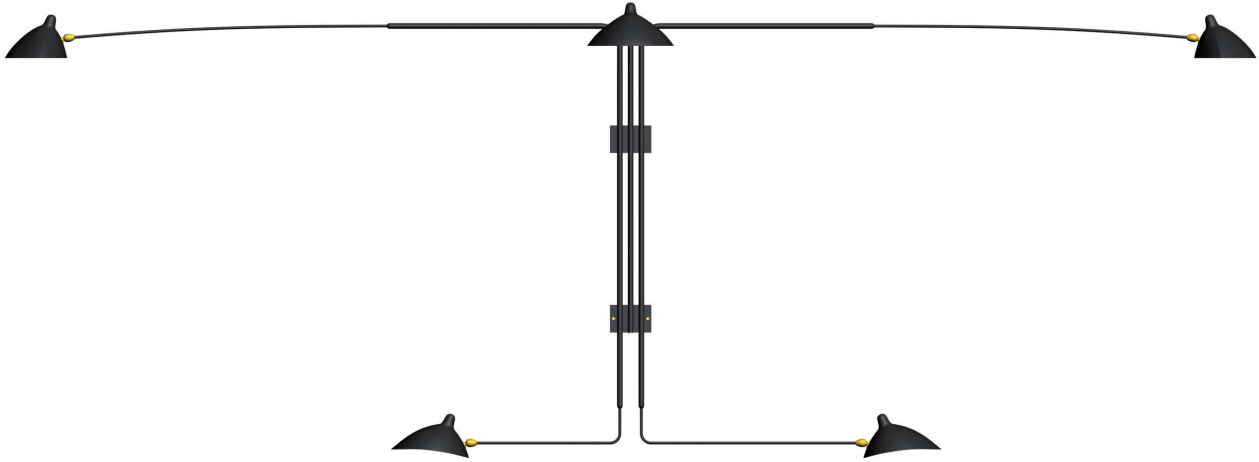

120V / 50 Hz
5x60W incandescent

Suitable for indoor use only. Maximum ambient temperature 25°C.
Caution : The luminaire shall be always connected to the main ground conductor.

Installation has to be carried out by a qualified electrician. This lamp must be permanently wired into the electric system. Always shut off power to the circuit before starting installation work.

The main conductors coming from the wall into the housing must have a minimal length of 15cm/6inch between the wall plate and the electrical connection to the lamp.

Smooth wire : connect to the line
Ribbed wire : connect to the neutral
Yellow/Green wire : connect to the ground

Different materials require different types of fittings. Always choose screws and plugs that are specially suited to the material.

If the external flexible cable or cord of this luminaire is damaged, it must be exclusively replaced by the manufacturer to avoid any hazard.

Shut off power to the circuit before changing the bulbs.

Instructions

Sconce 5 rotating straight arms



1. Unpack without using any cutter or scissor because of possible scratches. Release the packaging of reflectors without removing it completely. Remove the cable protective caps in red plastic from the tubes.

2. Unscrew carefully the 8 screws to remove the back of the square housings. Unscrew the black cables (back side) to separate the plates from the lamp.

3. Fix the square plates to the wall, respecting the verticality of the lamp. Different materials require different types of fittings. Always choose screws and plugs that are specially suited to the material.

4. Fix the 2 lower curved tubes into the central tubes. Screw the hexagonal brass screws without tighten them otherwise painting could be damaged. Unscrew the 3 screws in the top of the central tubes. Fix the 3 upper big curved tubes into the central tubes. Rescrew the 3 screws. Fix the 3 upper straight tubes into the big curved tubes then screw the hexagonal brass screws at the fitting.

5. At this stage, at least 2 operators are necessary. Before starting, turn off power at main circuit panel. One operator maintains the lamp, second operator screws the black cables then connects electrical wires.

6. Fit the square housings into the square plates on the wall. Then screw carefully the 8 screws otherwise painting could be damaged.

7. Remove completely the packaging.

8. Before moving the lower arms, the screw must not be tightened otherwise painting could be damaged.

